

Continuity Tester

TESTS FOR CONTINUITY ON:

- * Fuses
- * Wires
- * Light Bulbs
- * Ground Continuity

INSTRUCTIONS:

1. Disconnect positive lead on battery terminal.
2. Attach alligator clip to one end of fuse, wire or lamp being tested.
3. Remove plastic shield from probe tip and touch probe tip to the other end of fuse, wire or lamp.
4. Indicator bulb will glow if continuity is present.

Tester uses one AAA battery (not included).

To use on other circuits, always disconnect power and repeat steps 2 through 4.



Test Extension Chords

Test Fuses

CAUTION / PRECAUCION

Use extreme caution when checking electrical circuits to avoid injury due to electrical shock. We assumes basic knowledge of electricity on the part of the purchaser and is not responsible for any injury or damages due to improper use of this tester.